

Stanguard™
Safe Door System™


STANLEY

Stop me
in my tracks !




1 Measure and Trim

- Align holes latch and deadbolt
- Trim excess from ends if necessary

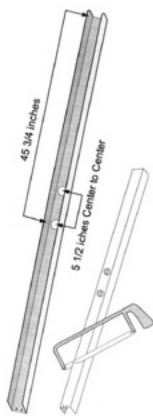


2 Silicone & Install

- Apply silicone adhesive along inside of Safe Door System™ channel
- Install Safe Door System™ to edge of door

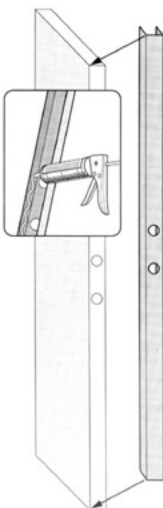

3 Chisel, if necessary and install

- Chisel door jamb to allow Safe Door System™ strikeplate to sit flush with door jamb
- Install Safe Door System™ strike plate using six supplied screws

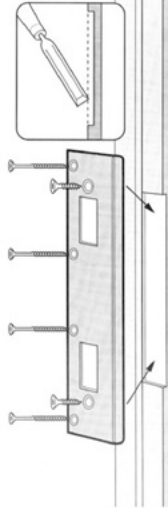

4 Completed Assembly

- Your Safe Door System™ is now installed

